

ORIGINAL



BEST BUY •

MANUAL

PROFESSIONAL

CEOX II

CORDLESS CLIPPERS

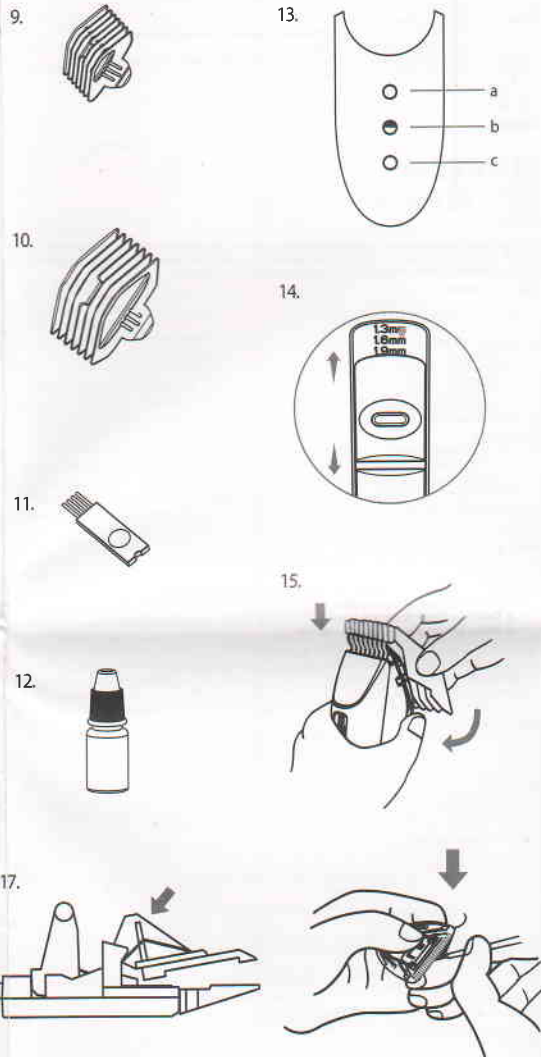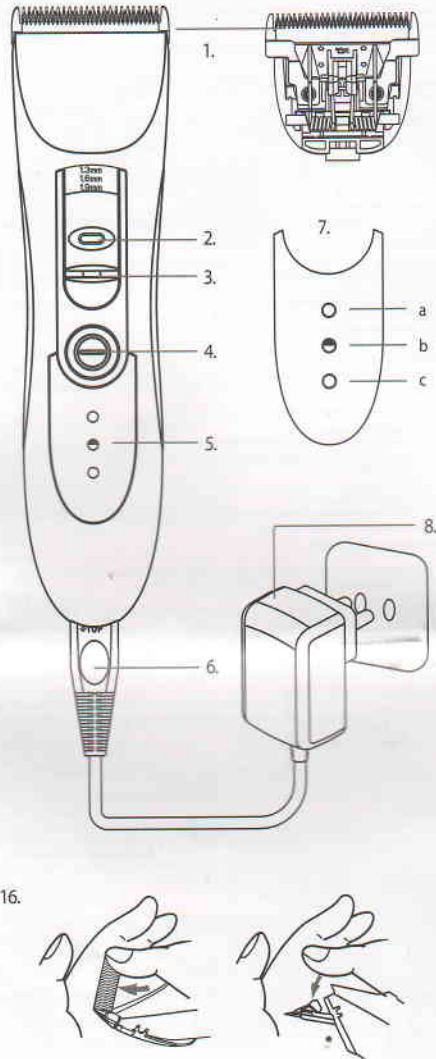

ENGLISH INSTRUCTIONS

CEOX II

This product is designed for trimming 100% human hair. Using the clippers on synthetic hair will cause malfunction. Please refrain from doing so. Sinelco BVBA will not be held liable for malfunctions if used incorrectly.

Parts and Functions

1. Blade
2. Length setting
3. Shift key
4. On/Off button
5. LED screen
6. DC plug
7. a. Full battery indicator
- b. Low battery indicator
- c. Recharge battery indicator
8. Power adaptor

Accessories

9. Comb Size: 3-6mm
10. Comb Size: 9-12mm
11. Cleaning brush
12. Lubricating oil bottle

Product Specifications

Model: Ceox II
Item
Charger

Rechargeable Battery
Charge Type
Charging time
Fully charged operable

Specifications
Input: AC100V-240V 50/60Hz
Output: DC3.5V 1000mA
3.7V 1300mAh
Lithium-ion rechargeable battery
About 2 hours
About 2.5 hours

LED Display Functions

The LED indicators display two different functions:

• Indicates the state of the product being charged.

• Indicates the remaining power status

13. a. Full battery indicator
 b. Low battery indicator
 c. Recharge battery indicator

Charge status LED indicator

Charging (0-10 minutes). The red light blinks for the first 10 min then lights up continuously. The green indicator light blinks between 10 - 40 minutes then lights up continuously. The green indicator light lights up continuously between 40 - 120 minutes.

LED indicators: operating status

Between 0-90 min of usage, the green LED light blinks. Between 90-120 min of usage, the green indicator light is off. The red indicator lights up continuously during the remaining usage time.

Length adjustment function

Illustration 14.

Shift key adjustment method
Push the key with your thumb to the desired length. Push the key upward for shorter hair. Push the key downward for longer hair.

Function and handling methods with comb

Illustration 15.

The comb is used to trim hair to different lengths. The comb on the hair-cutting attachment can be set to the desired length, such as 3mm, 6mm, 9mm or 12mm.

Comb installation: Fasten the comb by sliding the comb first downward and then forward. When lodged, the comb will not fall off during use.

Removing the comb: Remove the comb by pulling the comb towards you and then upward.

Cleaning and removal of the head

Illustration 16.

Use your thumb to push off the head of the clippers.

Illustration 17.

Remove hair with the cleaning brush. If you use a knife, hold it at the top left between the upper and lower blade as shown in the picture above.

(Disassembling will cause malfunction. Do not attempt to disassemble.)

Illustration 18.

After cleaning, inject 1-2 drops of oil in the head of the machine and then put the head back on the device.

(You must hear a "clicking" sound when the head is correctly aligned with the slot.)

