



# ZERO ESTREMO pro

PROFESSIONAL HAIR CLIPPER



EN

# ZERO ESTREMO

pro

PROFESSIONAL  
HAIR CLIPPER



### SPECIFICATIONS

- Weight: 245 gr
- Supply Voltage: 100/240V
- 4-5W
- Cable length: 3m
- Complies with EU directive: CE


### KIT INCLUDES

- Comb attachments 1,5mm, 4,5mm, 6mm
- Blade protector
- Cleaning brush
- 10c.c. oil bottle

### FEATURES

- DC power driving, largely enhance the cutting driving force.
- Sharp steel blades for a professional use, with an integrated skin protection system.
- Appearance: fashing and portable.

**READ ALL INSTRUCTIONS BEFORE USING AND SAVE THESE INSTRUCTIONS.**

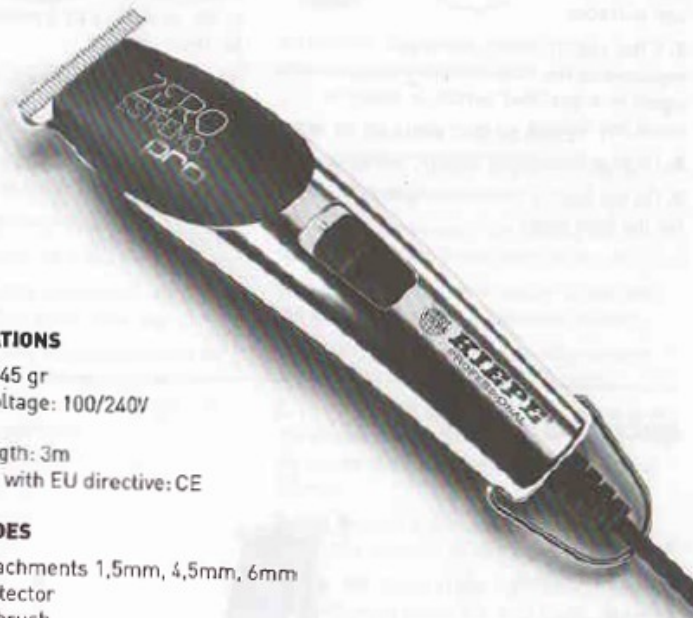

### IMPORTANT

1. Pay attention to the rating voltage.
2. Only use the clipper to cut the hair.
3. Do not use the clipper in case it has fallen into water.
4. Only use the clipper in a dry place.
5. Never use the clipper if it is damaged.
6. Keep the supply cord away from hot or wet surfaces.
7. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a qualified person in order to avoid any hazard.
8. Unplug the clipper before cleaning.
9. Oil the blades before using the clipper for the first time.
10. Always store the clipper with the blade cover covering the blades.
11. Do not use it more than 10 minutes while working continuously.
12. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
13. Children should be supervised to ensure that they do not play with the appliance.

### DESCRIPTION OF PARTS

- A Blades
- B ON/OFF switch
- C Cable
- D Blade cover
- E Attachment combs  
(4pcs:  
1,5mm, 4,5mm, 6mm)
- F Lubrication oil
- G Cleaning brush



1. ON-OFF switch
2. Clip-on comb
3. Oil the blades
4. Change and fix the blades



### HOW TO USE

1. Apply oil to the cutting blades before using the device for the first time.
2. Connect to the power outlet.
3. Turn on the clipper by ON/OFF switch.
4. Please only use the correct oil, apply the oil to the blades after each time use.

**Note:** An audible click may sometimes be heard when switching the equipment on, it is a result of the drive unit switching on. This is completely normal.

### HOW TO CHANGE THE BLADES

Switch off the clipper and disconnect it from the power outlet.

Undo both screws on the cutting set, remove the bottom blade and the top blade.

When assembling, the bottom blade and top blade should be aligned as follows:

1. Adjust the cutting-length adjustment lever to the shortest cutting length.
2. The distance between the front edge of the bottom blade and the front edge of the top blade should be between 0.8mm and 1.5mm.
3. The bottom blade and the top blade should be parallel to each other.
4. The first tooth of the top blade (from the left) must cover the first tooth of the bottom blade.
5. The outermost tooth of the top blade (on the right) must touch the outermost large tooth of the bottom blade (on the right).
6. Tighten both screws.

## **WARRANTY**

**1.** KIEPE PROFESSIONAL gives a six-month warranty on all of their electrical device components not liable to wear and tear. The rights from this warranty are supplementary to the legal and/or contractual warranty claims which customers have against each respective seller.

**2.** The six-month warranty period begins with the handover of the device. The time of the handover must be proven by presentation of a purchase slip such as a sales check, invoice, delivery note or the like.

**3.** Defects which occur within the warranty period and which are reported to us in writing within three weeks of their occurrence will be corrected by us free of charge subject to the restrictions listed in Item 4.

**4.** Repairs must be made in our factory or at a point of sales authorized by us. The customer has no further reaching rights from this warranty.

**4.-** Defects caused by excessive use, improper handling and maintenance and by non-compliance with operating instructions are not covered by the warranty. The same applies to defects which occur as a result of the normal wear and tear

of expendable components (e.g. drive components).

**5.** The warranty period will not be extended by the effecting of any warranty performances.

**6.** Parts exchanged within the scope of warranty repair work become our property.

**7.** In the event of unjustified use of our customer service, the costs incurred will be charged to the customer.